


General Force CU 300-W88

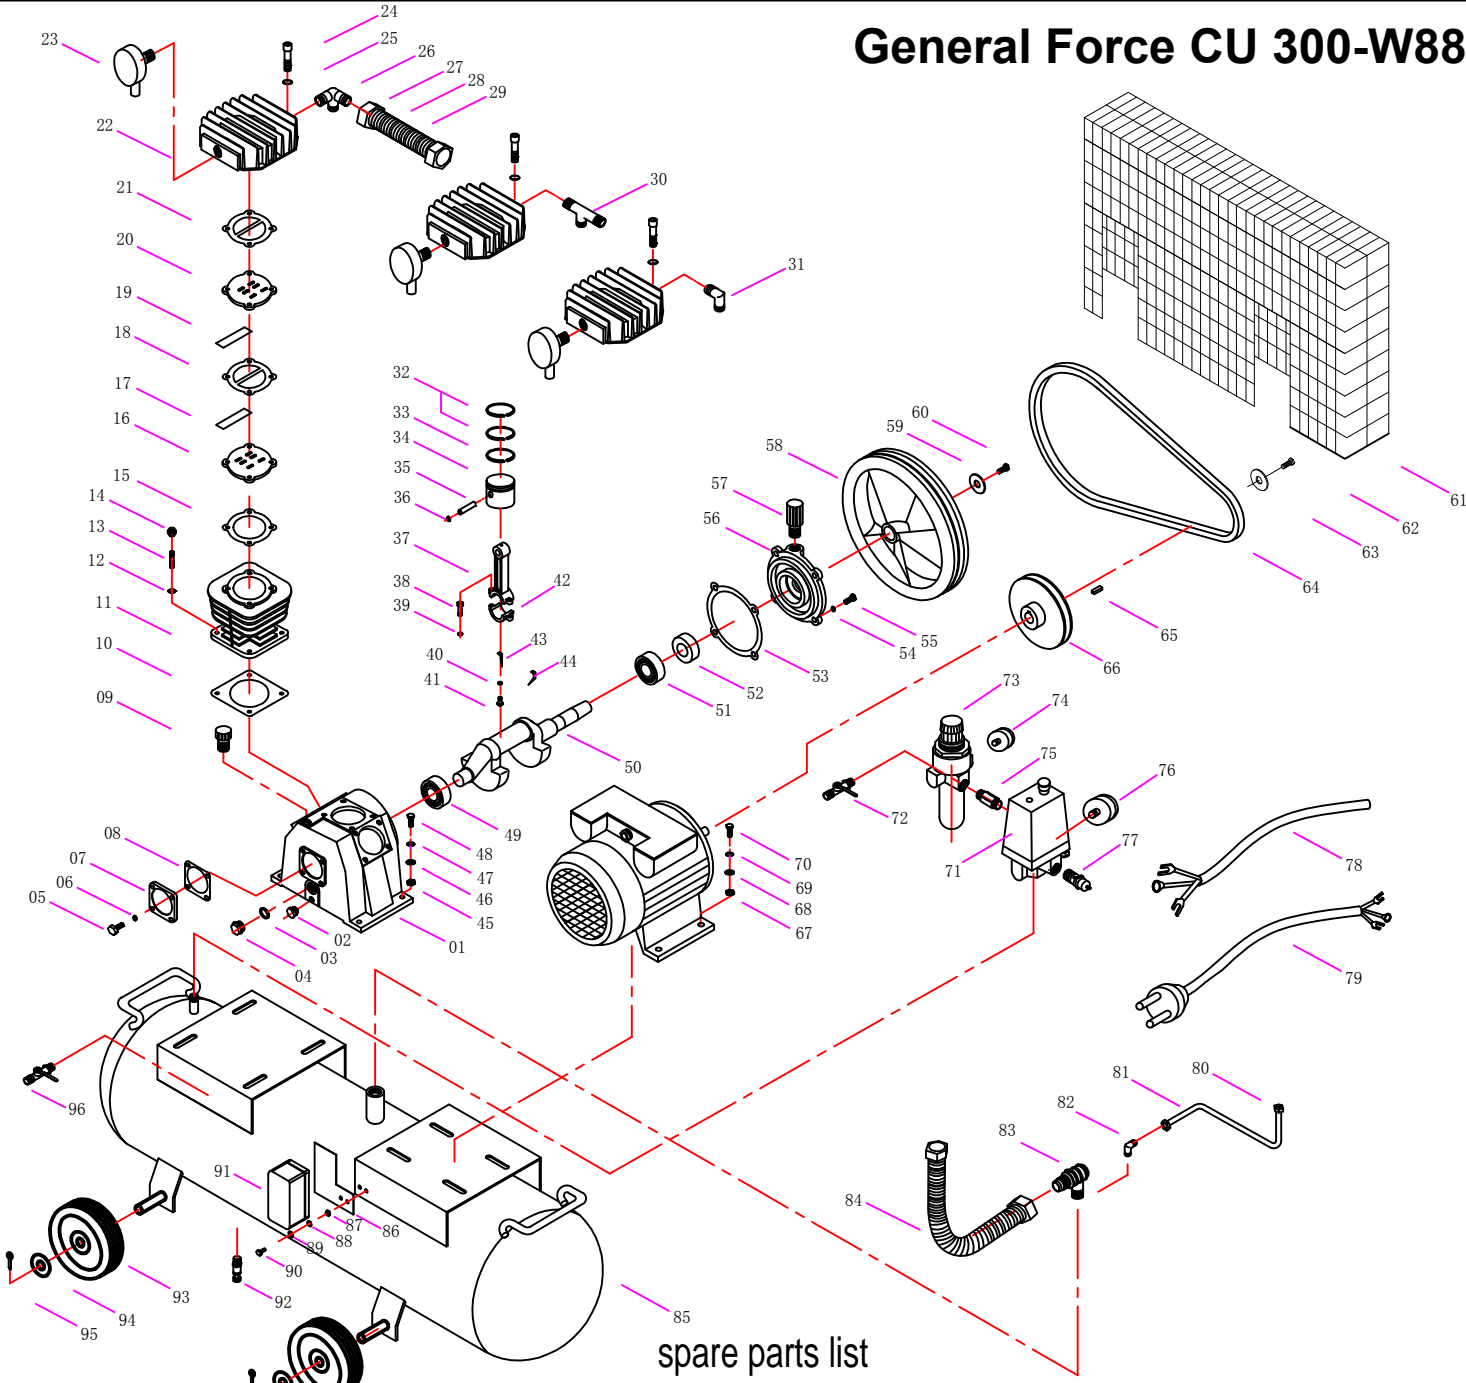

spare parts list

- | | | | | | |
|-----------------------|----------------------|------------------------|--------------------|---------------------|-------------------|
| 01 crank case | 20 valve plate | 39 spring washer | 58 flywheel | 76 pressure gauge | 95 split pin |
| 02 oil release plug | 21 head cover gasket | 40 screw | 59 flywheel gasket | 77 safety valve | 96 air vent valve |
| 03 oil sight seal | 22 head cover | 41 bolt | 60 bolt | 78 motor power cord | |
| 04 oil viewer | 23 air filter | 42 spring washer | 61 belt guard | 79 power cord | |
| 05 screw | 24 bolt | 43 fuel inject needle | 62 bolt | 80 nut | |
| 06 spring washer | 25 spring washer | 44 fuel inject needle | 63 flat gasket | 81 tube | |
| 07 real cover | 26 three-way screw | 45 nut | 64 belt | 82 elbow | |
| 08 real cover gasket | 27 nut | 46 flat gasket | 65 key | 83 check valve | |
| 09 oil plug | 28 exhaust pipe | 47 spring washer | 66 motor pulley | 84 exhaust pipe | |
| 10 cylinder gasket | 29 cooling pin | 48 bolt | 67 nut | 85 tank | |
| 11 cylinder | 30 three-way elbow | 49 bearing | 68 flat gasket | 86 support | |
| 12 spring washer | 31 elbow | 50 crankshaft | 69 spring washer | 87 nut | |
| 13 bolt | 32 compressor ring | 51 bearing | 70 bolt | 88 spring washer | |
| 14 nut | 33 oil ring | 52 oil seal | 71 pressure switch | 89 flat gasket | |
| 15 valve plate gasket | 34 piston | 53 bearing seal gasket | 72 air vent valve | 90 bolt | |
| 16 valve gasket | 35 piston pin | 54 gasket | 73 air regulator | 91 protector | |
| 17 valve reed | 36 pin clip | 55 bolt | 74 pressure gauge | 92 drain valve | |
| 18 aluminum gasket | 37 connecting rod | 56 bearing seat | 75 connecting bolt | 93 wheel | |
| 19 valve reed | 38 screw | 57 breather | | 94 flat gasket | |