


General Force CU 50-V36(A)

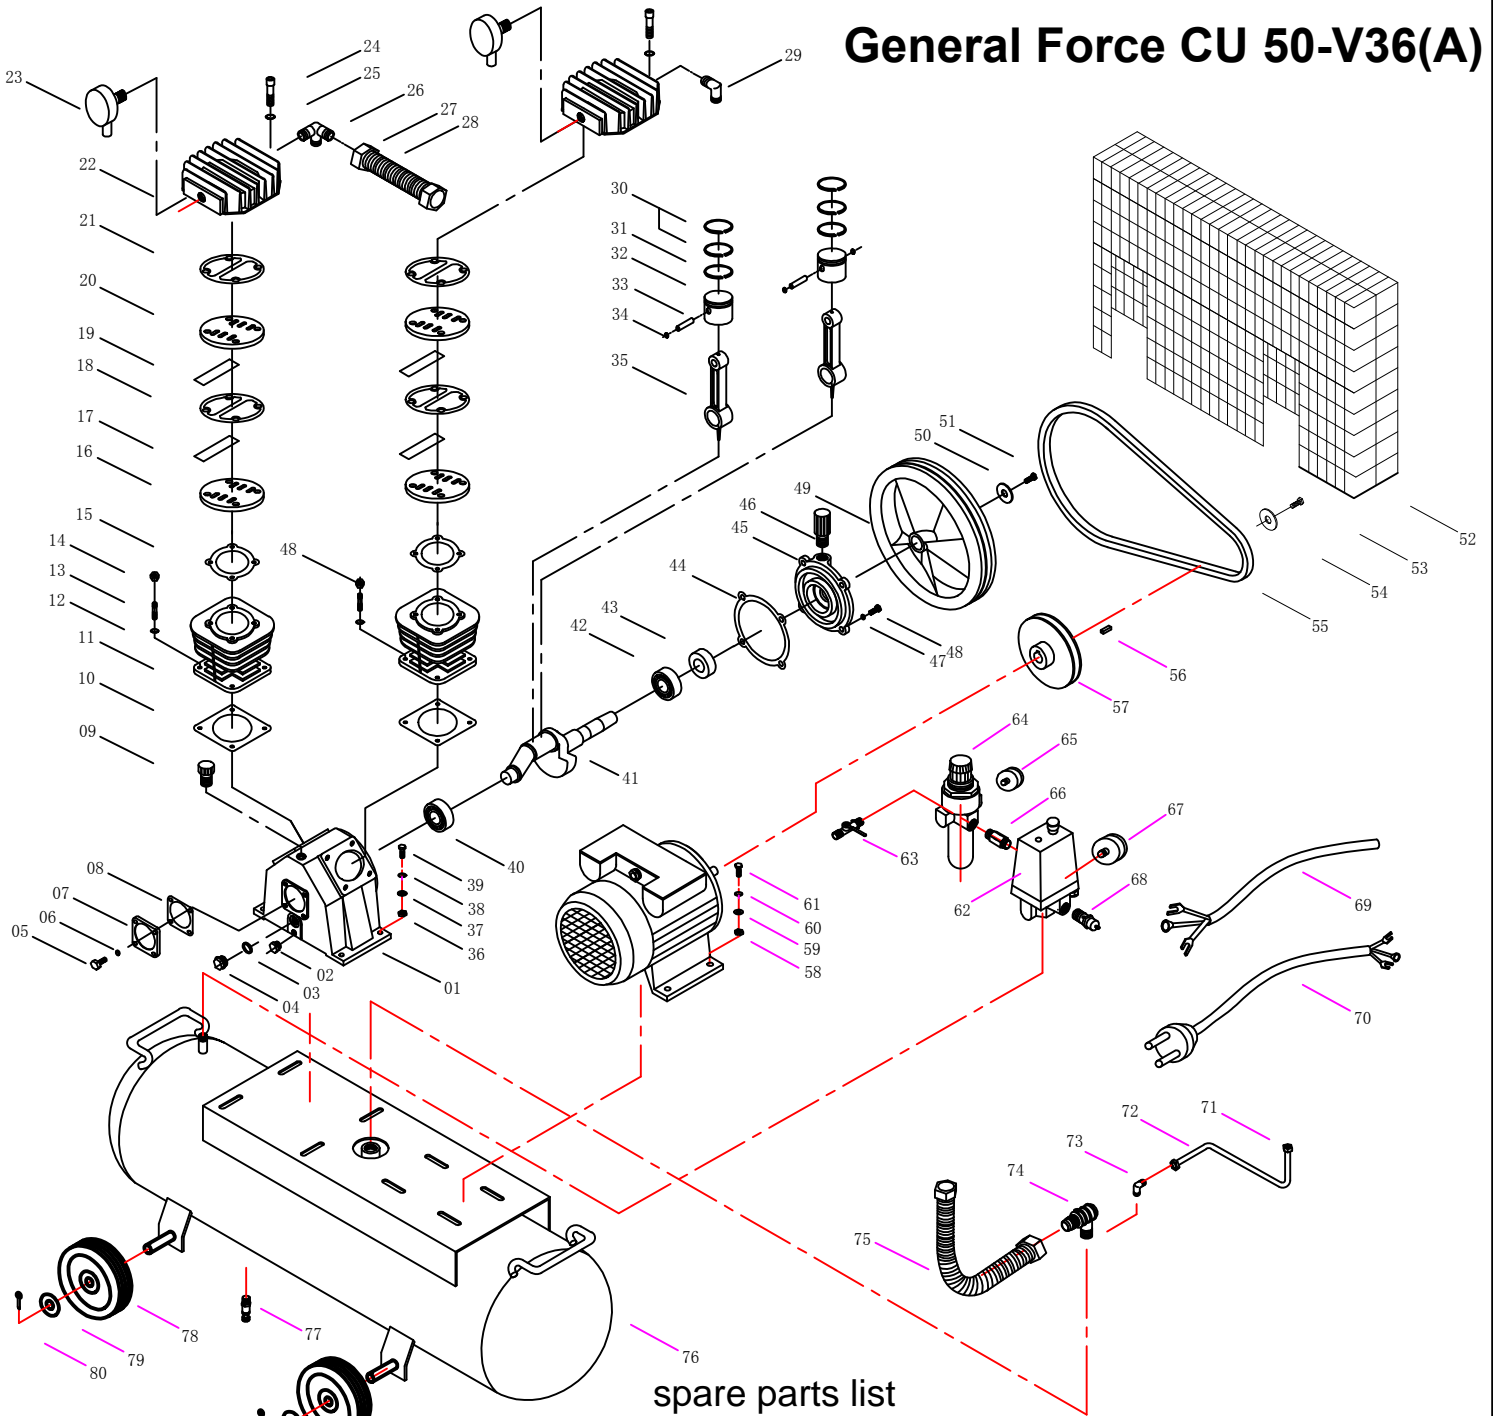

spare parts list

- | | | | | | |
|------------------------|----------------------|--------------------|------------------------|---------------------|--------------------|
| 01 crank case | 15 valve plate | 29 elbow | 43 oil seal | 57 motor pulley | 71 nut |
| 02 oil sightglass | 16 valve plate | 30 compressor ring | 44 bearing seal gasket | 58 nut | 72 tube |
| 03 oil sightglass seal | 17 valve reed | 31 oil ring | 45 bearing seat | 59 washer | 73 elbow connector |
| 04 oil viewer | 18 aluminum gasket | 32 piston | 46 breather | 60 spring washer | 74 check valve |
| 05 screw | 19 valve reed | 33 piston pin | 47 washer | 61 bolt | 75 exhaust pipe |
| 06 copper backing | 20 valve plate | 34 pin clip | 48 bolt | 62 pressure switch | 76 tank |
| 07 real cover | 21 head cover gasket | 35 connecting rod | 49 flywheel | 63 air vent valve | 77 drain valve |
| 08 real cover gasket | 22 head cover | 36 nut | 50 flywheel washer | 64 air regulator | 78 wheel |
| 09 oil plug | 23 air filter | 37 gasket | 51 bot | 65 pressure gauge | 79 flat washer |
| 10 cylinder gasket | 24 bolt | 38 washer | 52 belt guard | 66 connecting bolt | 80 split pin |
| 11 cylinder | 25 spring washer | 39 bolt | 53 bolt | 67 pressure gauge | |
| 12 spring washer | 26 three-way elbow | 40 bearing | 54 washer | 68 safety valve | |
| 13 bolt | 27 nut | 41 crank shaft | 55 belt | 69 motor power cord | |
| 14 nut | 28 exhaust pipe | 42 bearing | 56 key | 70 power cord | |